



---

# **EM100 Series and ET100 Series Modbus**

---

**MODBUS COMMUNICATION  
PROTOCOL**

**Public version**

Version 4.0

June 20<sup>th</sup>, 2025

# Index

<b>1. Introduction .....</b>	<b>3</b>
<b>2. Modbus functions .....</b>	<b>3</b>
2.1 Function 03h (Read Holding Registers) .....	4
2.2 Function 04h (Read Input Registers) .....	5
2.3 Function 06h (Write Single Holding Register) .....	6
2.4 Function 08h (Diagnostic with sub-function code 00h) .....	7
2.5 Broadcast mode .....	8
2.6 Application notes .....	8
2.7 Modbus timing .....	8
<b>3. Data format, Variables and Parameters .....</b>	<b>9</b>
3.1 Data format representation in Carlo Gavazzi instruments .....	9
3.2 Geometric representation .....	9
3.3 Sign convention .....	10
3.4 Maximum and minimum electrical values in EM100 / ET100 SERIES .....	10
<b>4. Table .....</b>	<b>11</b>
4.1 Instantaneous variables and meters .....	11
4.2 Firmware version and revision code .....	15
4.3 Programming parameter tables .....	16
4.3.1 Password configuration menu .....	16
4.3.2 System and CT configuration menu .....	16
4.3.3 Dmd and pulse outs configuration menu .....	16
4.3.4 Other functions configuration menu .....	17
4.3.5 Active tariff selection (not available in EM111) .....	17
4.3.6 Serial port configuration menu .....	18
4.3.7 Reset commands .....	18
4.3.8 Serial number .....	19
4.3.9 Production year .....	19
4.3.10 Default value .....	19
<b>5. Revisions .....</b>	<b>20</b>

## 1. Introduction

The RS485 serial interface supports the Modbus/JBus (RTU) protocol. In this document only the information necessary to read/write from/to EM100 / ET100 SERIES has been reported (not all the parts of the protocol have been implemented).

For a complete description of the Modbus protocol please refer to the latest revision of the “Modbus\_Application\_Protocol” document that is downloadable from the [www.modbus.org](http://www.modbus.org) web site.

## 2. Modbus functions

These functions are available on EM100 / ET100 SERIES:

- Reading of n “Holding Registers” (code 03h),
- Reading of n “Input Register” (code 04h),
- Writing of one “Holding Registers” (code 06h),
- Diagnostic (code 08h with sub-function code 00h),
- Broadcast mode (writing instruction on address 00h).

### IMPORTANT:

- In this document the “Modbus address” field is indicated in two modes:
  - “Modicon address”: it is the “6-digit Modicon” representation with Modbus function code 04 (Read Input Registers). It is possible to read the same values with function code 03 (Read Holding Registers) replacing the first digit (“3”) with the number “4”.
  - “Physical address”: it is the “word address” value to be included in the communication frame.
- The functions 03h and 04h have exactly the same effect and can be used indifferently.
- The communication parameters are to be set according to the configuration of the instrument (refer to EM100 / ET100 SERIES instruction manual)

## 2.1 Function 03h (Read Holding Registers)

This function is used to read the contents of a contiguous block of holding registers (word). The Request frame specifies the starting register address and the number of registers to be read. It is possible to read:

maximum 125 registers (words) with a single request in EM112 / ET112 versions

maximum 50 registers (words) with a single request in EM111 versions

The register data in the response message are packed as two bytes per register (word), with the binary contents right justified within each byte. For each register, the first byte contains the high order bits (MSB) and the second contains the low order bits (LSB).

**Table - 1.1 - Request frame Function 03h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	03h	-
Starting address	2 bytes	0000h to FFFFh	Byte order: MSB, LSB
Quantity of registers (N word)	2 bytes	1 to 7Dh (1 to 125) in EM112/ET112 1 to 32h (1 to 50) in EM111	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.2 - Response frame (correct action) Function 03h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	03h	-
Quantity of requested bytes	1 byte	N word * 2	-
Register value	N*2 bytes	-	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.3 - Response frame (incorrect action) Function 03h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure
Function code	1 byte	83h	
Exception code	1 byte	01h, 02h, 03h, 04h (see note)	
CRC	2 bytes	-	

## 2.2 Function 04h (Read Input Registers)

This function code is used to read the contents of a contiguous block of input registers (word). The Request frame specifies the starting register address and the number of registers to be read. It is possible to read:

maximum 125 registers (words) with a single request in EM112 / ET112 versions -

maximum 50 registers (words) with a single request in EM111 versions

The register data in the response message are packed as two bytes per register (word), with the binary contents right justified within each byte. For each register, the first byte contains the high order bits (MSB) and the second contains the low order bits (LSB).

**Table - 1.4 - Request frame Function 04h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	04h	-
Starting address	2 bytes	0000h to FFFFh	Byte order: MSB, LSB
Quantity of registers (N word)	2 bytes	1 to 7Dh (1 to 125) in EM112/ET112 1 to 32h (1 to 50) in EM111	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.5 - Response frame (correct action) Function 04h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	04h	-
Quantity of requested bytes	1 byte	N word * 2	-
Register value	N*2 bytes	-	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.6 - Response frame (incorrect action) Function 04h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure
Function code	1 byte	84h	
Exception code	1 byte	01h, 02h, 03h, 04h	
CRC	2 bytes	-	

### 2.3 Function 06h (Write Single Holding Register)

This function code is used to write a single holding register. The Request frame specifies the address of the register (word) to be written and its content.

The correct response is an echo of the request, returned after the register content has been written.

**Table - 1.7 - Request frame Function 06h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	06h	-
Starting address	2 bytes	0000h to FFFFh	Byte order: MSB, LSB
Register value	2 bytes	0000h to FFFFh	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.8 - Response frame (correct action) Function 06h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	06h	-
Starting address	2 bytes	0000h to FFFFh	Byte order: MSB, LSB
Register value	2 bytes	0000h to FFFFh	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.9 - Response frame (incorrect action) Function 06h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure
Function code	1 byte	86h	
Exception code	1 byte	01h, 02h, 03h, 04h	
CRC	2 bytes	-	

## 2.4 Function 08h (Diagnostic with sub-function code 00h)

This function 08h provides a series of tests to check the communication system between a client (Master) device and a server (Slave), or to check various internal error conditions in a server.

EM100 / ET100 SERIES supports only 0000h sub-function code (Return Query Data). With this sub-function the data passed in the request data field is to be returned (looped back) in the response. The entire response message should be identical to the request.

**Table - 1.10 - Request frame Function 10h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	-
Function code	1 byte	08h	-
Sub-function	2 bytes	0000h	-
Data (N word)	N *2 bytes	Data	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.11 - Response frame (correct action) Function 10h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7 (1 to 247)	-
Function code	1 byte	08h	-
Sub-function	2 bytes	0000h	-
Data (N word)	N *2 bytes	Data	Byte order: MSB, LSB
CRC	2 bytes	-	-

**Table - 1.12 - Response frame (Incorrect action) Function 10h**

Description	Length	Value	Note
Physical address	1 byte	1 to F7h (1 to 247)	Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure
Function code	1 byte	88h	
Exception code	1 byte	01h, 02h, 03h, 04h	
CRC	2 bytes	-	

## 2.5 Broadcast mode

In broadcast mode the master can send a request (command) to all the slaves. No response is returned to broadcast requests sent by the master. It is possible to send the broadcast message only with function code 06h using address 00h.

## 2.6 Application notes

- To avoid errors due to the signal reflections or line coupling, it is necessary to terminate the bus at the beginning (master side, if not already embedded, by inserting a 120  $\Omega$ , 1/2 W, 5% resistor between line B and A) and at the end (in EM111, EM112 and ET112 by connecting the terminal A- with the terminal T in the last instrument). The network termination is necessary even in case of point-to-point connection and/or of short distances.
- For connections longer than 1000 m or if in the network there are more than 160 instruments (with 1/5 unit load as used in EM100 / ET100 SERIES interface), a signal repeater is necessary.
- For bus connection it is suggested to use an AWG24 balanced pair cable and to add a third wire for GND connection. If a shielded cable is used, connect the shield to GND.
- The GND should be connected to ground only at the master side.
- If an instrument does not answer within the “max answering time”, it is necessary to repeat the query. If the instrument does not answer after 2 or 3 consecutive queries, it is to be considered as not connected, faulty or reached with a wrong address. The same consideration is valid in case of CRC errors or incomplete response frames.

## 2.7 Modbus timing

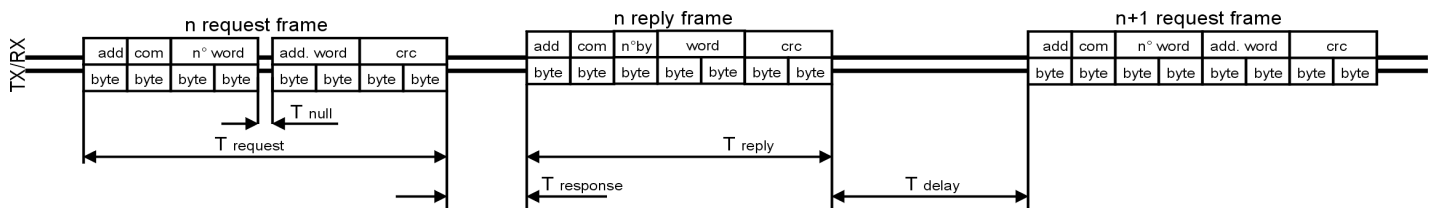


Fig. 1: 2-wire timing diagram

Timing characteristics of reading function:	ms
T response: Max answering time	500 ms
T response: Typical answering time	40 ms
T delay: Minimum time before a new query	3.5 char
T null: Max interruption time during the request frame	2.5 char



### 3. Data format, Variables and Parameters

#### 3.1 Data format representation in Carlo Gavazzi instruments

The variables are represented by integers or floating numbers, with 2's complement notation in case of "signed" format, using the following:

**Table 3.1 - Data format representation**


Format	IEC data type	Description	Bits	Range
INT16	INT	Integer	16	-32768 .. 32767
UINT16	UINT	Unsigned integer	16	0 .. 65535
INT32	DINT	Double integer	32	$-2^{31} .. 2^{31}$
UINT32	UDINT	Unsigned double integer	32	$0 .. 2^{32-1}$
UINT64	ULINT	Unsigned long integer	64	$0 .. 2^{64-1}$
IEEE754 SP	-	Single-precision floating-point	32	$-(1+[1-2^{-23}]) \times 2^{127} .. 2^{128}$

For all the formats the byte order (inside the single word) is MSB->LSB. In INT32, UINT32 and UINT64 formats, the word order is LSW-> MSW.

#### 3.2 Geometric representation

According to the signs of the power factor, the active power P and the reactive power Q, it is possible to obtain a geometric representation of the power vector, as indicated in the drawing below, according to EN 60253-23:

**Table 3.2 - Geometric representation of variables**

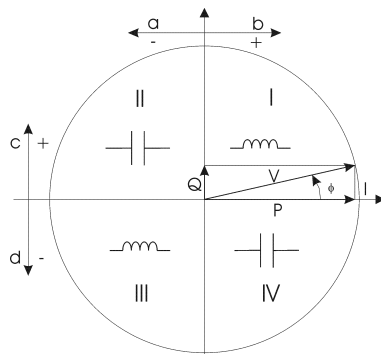

a = Exported active power

b = Imported active power

c = Imported reactive power









d = Exported reactive power

**Fig. 2 : Geometric Representation**

### 3.3 Sign convention

According to the measurement mode (easy connection or bidirectional), the following sign convention is used in EM100 / ET100 SERIES:

**Table 3.3 - Sign convention for each model of the serie**

Measurement mode	Real measurement	EM100 SERIES Displayed values	EM111 Communication port values	EM112, ET112 Communication port values	Energies recording mode	Notes
Easy connection	 Quadrant I	A, W, var, L PF	A, W, var, PF	A, W, var, PF	kWh increases kvarh increases	Measurement A or PFA models
	 Quadrant II	A, W, -var, C PF	A, W, -var, PF	A, W, -var, PF	kWh increases kvarh doesn't increase	Measurement A or PFA models
	 Quadrant III	A, W, var, L PF	A, W, var, PF	A, W, var, PF	kWh increases kvarh increases	Measurement A or PFA models
	 Quadrant IV	A, W, -var, C PF	A, W, -var, PF	A, W, -var, PF	kWh increases kvarh doesn't increase	Measurement A or PFA models
Bidirectional	 Quadrant I	A, W, var, L PF	A, W, var, PF	A, W, var, PF	kWh+ increases kvarh+ increases	Measurement B or PFB models
	 Quadrant II	-A, -W, var, -C PF	-A, -W, var, -PF	-A, -W, var, PF	kWh- increases kvarh+ increases	Measurement B or PFB models
	 Quadrant III	-A, -W, -var, -L PF	-A, -W, -var, -PF	-A, -W, -var, PF	kWh- increases kvarh- increases	Measurement B or PFB models
	 Quadrant IV	A, W, -var, C PF	A, W, -var, PF	A, W, -var, PF	kWh+ increases kvarh- increases	Measurement B or PFB models

### 3.4 Maximum and minimum electrical values in EM100 / ET100 SERIES

If the input is above the maximum value the display shows “EEE”.

	AV5 input		AV7 input		AV8 input		AV0 input		AV1 input	
	Max value	Min value	Max value	Min value	Max value	Min value	Max value	Min value	Max value	Min value
<b>VL-N</b>	299 V	0	156 V	0	299 V	0	299 V	0	156 V	0
<b>A</b>	6A (360 A)	0	54 A	0	54 A	0	120 A	0	120 A	0

The overflow indication “EEE” is displayed when the MSB value of the relevant variable is 7FFFFFFFh (word order FFFF 7FFF).

## 4. Table

### 4.1 Instantaneous variables and meters

**Table 4.1 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
300001	0000h	2	V L-N	INT32	Value weight: Volt*10
300003	0002h	2	A	INT32	Value weight: Ampere*1000
300005	0004h	2	W	INT32	Value weight: Watt*10
300007	0006h	2	VA	INT32	Value weight: VA*10
300009	0008h	2	var	INT32	Value weight: var*10
300011	000Ah	2	W dmd	INT32	Value weight: Watt*10
300013	000Ch	2	W dmd peak	INT32	Value weight: Watt*10
300015	000Eh	1	PF	INT16	Value weight: PF*1000
300016	000Fh	1	Hz	INT16	Value weight: Hz*10
300017	0010h	2	kWh (+) TOT	INT32	Value weight: kWh*10
300019	0012h	2	kvarh (+) TOT	INT32	Value weight: kvarh*10
300021	0014h	2	kWh (+) PARTIAL	INT32	Value weight: kWh*10
300023	0016h	2	kvarh (+) PARTIAL	INT32	Value weight: kvarh*10
300025	0018h	2	kWh (+) t1	INT32	Value weight: kWh*10
300027	001Ah	2	kWh (+) t2	INT32	Value weight: kWh*10
300029	001Ch	2	kWh (+) t3	INT32	Not available, value =0
300031	001Eh	2	kWh (+) t4	INT32	Not available, value =0
300033	0020h	2	kWh (-) TOT	INT32	Value weight: kWh*10
300035	0022h	2	kvarh (-) TOT	INT32	Value weight: kvarh*10
300037	0024h	2	kWh (-) PARTIAL	INT32	Not available, value =0
300039	0026h	2	kvarh (-) PARTIAL	INT32	Not available, value =0
300041	0028h	2	kVAh TOT	INT32	Not available, value =0
300043	002Ah	2	kVAh PARTIAL	INT32	Not available, value =0
300045	002Ch	2	Hour counter	INT32	Value weight: hours*100, only ET112
300047	002Eh	2	n.a.	INT32	Not available, value =0
300049	0030h	2	n.a.	INT32	Not available, value =0
300051	0032h	2	THD A	INT32	Not available, value =0
300053	0034h	2	THD V L-N	INT32	Not available, value =0

**Table 4.2 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
<b>System variables</b>					
300257	0100h	2	A	INT32	Value weight: Ampere*1000
300259	0102h	2	V L-N	INT32	Value weight: Volt*10
300261	0104h	2	n.a.	INT32	Not available, value =0
300263	0106h	2	W	INT32	Value weight: Watt*10
300265	0108h	2	VA	INT32	Value weight: VA*10
300267	010Ah	2	var	INT32	Value weight: var*10
300269	010Ch	2	PF	INT32	Value weight: PF*1000
300271	010Eh	2	n.a.	INT32	Not available, value =0
300273	0110h	2	Hz	INT32	Value weight: Hz*10
<b>Total energies and dmd power</b>					
300275	0112h	2	kWh (+) TOT	INT32	Value weight: kWh*10
300277	0114h	2	kvarh (+) TOT	INT32	Value weight: kvarh*10
300279	0116h	2	kWh (-) TOT	INT32	Value weight: kWh*10
300281	0118h	2	kvarh (-) TOT	INT32	Value weight: kvarh*10
300283	011Ah	2	kW dmd	INT32	Value weight: Watt*10
300285	011Ch	2	kW dmd peak	INT32	Value weight: Watt*10
300287 to 300327	011Eh to 0146h	-	n.a.	INT32	Not available, value =0
<b>Other energies</b>					
300329	0148h	2	kWh (+) PARTIAL	INT32	Value weight: kWh*10
300331	014Ah	2	kvarh (+) PARTIAL	INT32	Value weight: kvarh*10
300333	014Ch	2	n.a.	INT32	Not available, value =0
300335	014Eh	2	n.a.	INT32	Not available, value =0
300337	0150h	2	n.a.	INT32	Not available, value =0
300339	0152h	2	kWh (+) t1	INT32	Value weight: kWh*10
300341	0154h	2	kWh (+) t2	INT32	Value weight: kWh*10
300343	0156h	2	kWh (+) t3	INT32	Not available, value =0
300345	0158h	2	kWh (+) t4	INT32	Not available, value =0
300347	015Ah	2	kWh (-) PARTIAL	INT32	Not available, value =0
300349	015Ch	2	Kvarh (-) PARTIAL	INT32	Not available, value =0
300351	015Eh	2	kVAh TOT	INT32	Not available, value =0
300353	0160h	2	kVAh PARTIAL	INT32	Not available, value =0
300365	016Ch	2	n.a.	INT32	Not available, value =0
300367	016Eh	2	n.a.	INT32	Not available, value =0
300369	0170h	2	n.a.	INT32	Not available, value =0
300371	0172h	2	kWh (+) t5	INT32	Not available, value =0
300373	0174h	2	kWh (+) t6	INT32	Not available, value =0
300375	0176h	2	kWh (+) t7	INT32	Not available, value =0
300377	0178h	2	kWh (+) t8	INT32	Not available, value =0
300379	017Ah	2	n.a.	INT32	Not available, value =0
300381	017Ch	2	n.a.	INT32	Not available, value =0
300383	017Eh	2	n.a.	INT32	Not available, value =0
<b>Other variables</b>					
300385	0180h	2	THD A	INT32	Not available, value =0
300387	0182h	2	THD V L-N	INT32	Not available, value =0
300389	0184h	2	n.a.	INT32	Not available, value =0

**IMPORTANT:** Table 4.1 and 4.2 are equivalent and, apart from the “Hour counter” register, includes a copy of the same variable values.

**Table 4.3 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
301025	0400h	2	kWh (+) TOT – INTEger part	INT32	Value=INT(kWh)*1 Example: if kWh=1234.567, value=1234
301027	0402h	2	kWh (+) TOT – DECimal part	INT32	Value=DEC(kWh)*1000 Example: if kWh=1234.567, value=567 (Note: the MSW is always 0)
301029	0404h	2	kvarh (+) TOT – INTEger part	INT32	Value=INT(kvarh)*1 Example: if kvarh=1234.567, value=1234
301031	0406h	2	kvarh (+) TOT – DECimal part	INT32	Value=DEC(kvarh)*1000 Example: if kvarh=1234.567, value=567 (Note: the MSW is always 0)
301033	0408h	2	kWh (-) TOT – INTEger part	INT32	-
301035	040Ah	2	kWh (-) TOT – DECimal part	INT32	Value=DEC(kWh)*1000 If PFA or X version with meas=A, value=0
301037	040Ch	2	kvarh (-) TOT – INTEger part	INT32	Value=INT(kvarh)*1 If PFA or X version with meas=A, value=0
301039	040Eh	2	kvarh (-) TOT – DECimal part	INT32	Value=DEC(kvarh)*1000 If PFA or X version with meas=A, value=0

**IMPORTANT:** those additional totalizers are available only in EM111 and EM112 model from firmware revision "b.10". This table is present only in instruments manufactured from January 1<sup>st</sup> 2020 (from serial number YR2020 001xxxU and following)

**Table 4.4 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
301281	0500h	4	kWh (+) TOT	INT64	INT64 format: LSW-MSW (less significant word first, most significant word after) Within a word: MSB-LSB (most significant byte first, less significant byte after)
301285	0504h	4	kvarh (+) TOT	INT64	-
301289	0508h	4	kWh (+) Partial	INT64	-
301293	050Ch	4	kvarh (+) Partial	INT64	-
301297	0510h	4	-	-	Not available, value =0
301301	0514h	4	-	-	Not available, value =0
301305	0518h	4	-	-	Not available, value =0
301309	051Ch	4	kWh (-) TOT	INT64	-
301313	0520h	4	kWh (-) Partial	INT64	-
301317	0524h	4	kvarh (-) TOT	INT64	-
301321	0528h	4	kvarh (-) Partial	INT64	-
301325	052Ch	4	kVAh TOT	INT64	Not available, value =0
301329	0530h	4	kVAh Partial	INT64	Not available, value =0

**IMPORTANT:** those additional totalizers are available only in EM111 and EM112 model from firmware revision "b.10". This table is present only in instruments manufactured from January 1<sup>st</sup> 2020 (from serial number YR2020 001xxxU and following).

**Table 4.5 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
301537	0600h	4	kWh (+) TOT	INT64	Value weight: Wh *10
301541	0604h	4	kWh (-) TOT	INT64	Value weight: Wh *10

**IMPORTANT:** those additional totalizers are available only in EM112 models from firmware revision "b.25". This table is present only in instruments manufactured from May the 30<sup>th</sup> 2025 (from serial number YR2025 150xxxZ and following).

## 4.2 Firmware version and revision code

**IMPORTANT:** reading values in addresses not specified in the below tables returns an illegal data address exception.

**Table 4.6 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
300771	0302h	1	Version code	UINT 16	Value=0: Version "A", =1: Version "B", etc.
300772	0303h	1	Revision code	UINT 16	Value=0: Revision "0" etc.

**Table 4.7 - Modbus read only mode with functions code 03 and 04**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
300012	000Bh	1	Carlo Gavazzi Controls identification code	UINT 16	See table 4.8

**Table 4.8 - Device identification code**

Complete item number	CG identification code
EM110-DIN AV8 1 X S1 X	110
EM110-DIN AV8 1 X S1 PF B	110
EM110-DIN AV7 1 X S1 X	100
EM110-DIN AV7 1 X S1 PF B	100
EM111-DIN AV8 1 X S1 X	103
EM111-DIN AV8 1 X S1 PF A	103
EM111-DIN AV8 1 X S1 PF B	103
EM111-DIN AV7 1 X S1 X	101
EM111-DIN AV7 1 X S1 PF A	101
EM111-DIN AV7 1 X S1 PF B	101
EM112-DIN AV0 1 X S1 X	104
EM112-DIN AV0 1 X S1 PF A	104
EM112-DIN AV0 1 X S1 PF B	104
EM112-DIN AV1 1 X S1 X	102
EM112-DIN AV1 1 X S1 PF A	102
EM112-DIN AV1 1 X S1 PF B	102
ET112-DIN AV0 1 X S1 X	120
ET112-DIN AV1 1 X S1 X	121
EM111-DIN AV5 1 X S1 X	114

### 4.3 Programming parameter tables

#### 4.3.1 Password configuration menu

**Table 4.9 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
304097	1000h	1	PASSWORD (EM only)	UINT 16	Minimum valid value: 0d Maximum valid value: 9999d In ET112 always 0

#### 4.3.2 System and CT configuration menu

**Table 4.10 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
304099	1002h	1	Measuring system	UINT 16	Value=0: "1P" (1-phase)
304100	1003h	2	Current transformer ratio	UNIT 32	Value min = 10 (CT=1.0) Value max = 600 (CT=60.0) (only for EM111 AV5)

**IMPORTANT:** the maximum (CT ratio) for AV5 model is 60. In this case it can display power with 2 decimals without requiring the auto ranging function.

#### 4.3.3 Dmd and pulse outs configuration menu

**Table 4.11 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
304113	1010h	2	Integration time for dmd power calculation	UINT 32	Value min = 1 Value max = 30
304115	1012h	2	Ton (Ton time for pulse output square wave)	UINT 32	Value min = 0 (30ms) Value max = 1 (100 ms)
304129	1020h	2	kWh per pulse relevant to digital out 1 (if existing)	UINT 32	-
304131	1022h	2	kWh per pulse relevant to digital out 2 (if existing)	UINT 32	-



#### 4.3.4 Other functions configuration menu

Table 4.12 - Read and write mode

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
304353	1100h	1	Display mode (only EM112)	UINT 16	Value min = 0 (Full, default) Value max = 1 (Easy) Any other value = Full
304354	1101h	1	Tariff management enabling	UINT 16	Value min = 0 (OFF) Value max = 1 (ON) Any other value = OFF
304355	1102h	1	Home page selection (only EM112)	UINT 16	Value min = 0 (page 0, default) Value max = 10 (page 10) Restrictions in case of display mode = Easy Any other value = page 0 Except for EM112, always =0
304356	1103h	1	Measurement mode selection	UINT 16	Value min = 0 (A) Value max = 1 (B) Any other value = A Write mode only for non-MID versions (X option) Toggle function: double (or multiple) writing of 1 value forces the measurement mode change.

#### 4.3.5 Active tariff selection (not available in EM111)

Table 4.13 - Read and write mode

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
304609	1200h	1	Tariff mode selection (tariff management via digital input or serial communication)	UINT 16	Value min = 0 (via digital inputs) Value max = 1 (via serial comm.) Any other value = via digital in.
304610	1201h	1	Tariff number selection via serial communication	UINT 16	Value min = 1 (tariff 1) Value max = 2 (tariff 2) Any other value = tariff 1 If 1200h = 0 (tariff via digital input), this parameter is "read only" mode

#### 4.3.6 Serial port configuration menu

**Table 4.14 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
308193	2000h	1	RS485 instrument address	UINT 16	Value min = 1 (default) Value max = 247
308194	2001h	1	RS485 baud rate	UINT 16	Value 1 = 9.6 kbps (default) Value 2 = 19.2 kbps Value 3 = 38.4 kbps Value 4 = 57.6 kbps Value 5 = 115.2 kbps Any other value = 9.6 kbps
308195	2002h	1	RS485 parity	UINT 16	Value 1= no parity (default) Value 2 = even parity Any other value = no parity
308196	2003h	1	Stop bit	UINT 16	Value 1= 1 (default) Value 2 = 2 (available only if parity is NONE) Any other value = 1
308197	2004h	1	Max number of words readable with a single Modbus request	UINT 16	Value = 125 (words), EM112, ET112 only reading Value = 50 (words), EM111 only reading

**IMPORTANT:** the number of stop bits is fixed to “1” if parity is EVEN.

#### 4.3.7 Reset commands

**Table 4.15 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
316385	4000h	1	Reset of all partial and tariff meters, kWdmd and kWdmd peak.	UINT 16	Value=0: reset done Value=1: execute the command All other values produce no effects
316386	4001h	1	Reset of total energy meters (only for non-MID versions, X option)	UINT 16	Value=0: reset done Value=1: execute the command All other values produce no effects
316387	4002h	1	Reset of hour counter (ET112 only)	UINT 16	Value=0: reset done Value=1: execute the command All other values produce no effects

#### 4.3.8 Serial number

**Table 4.16 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
320481	5000h	1	Letter 1 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code
320482	5001h	1	Letter 2 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code
320483	5002h	1	Letter 3 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code
320484	5003h	1	Letter 4 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code
320485	5004h	1	Letter 5 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code
320486	5005h	1	Letter 6 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code
320487	5006h	1	Letter 7 (from SX)	UINT 16	MSB: not to be used LSB: ASCII code Letter that identifies the production year, starting from S=2018 (*)

**IMPORTANT:** (\*) This letter actually refers to the production year only in instruments manufactured from October 1<sup>st</sup> 2018 (from serial number YR2018 274xxxS and following).

#### 4.3.9 Production year

**Table 4.17 - Read and write mode**

Modicon address	Physical address	Length (words)	VARIABLE ENG. UNIT	Data Format	Notes
320497	5010h	1	Production year	UINT 16	-

**IMPORTANT:** This register is available only in EM111 manufactured from October 1<sup>st</sup> 2018 (from serial number YR2018 274xxxS and following).

#### 4.3.10 Default value

The default value shall be automatically assigned to the parameters when an out-of-range or invalid value is written.

## 5. Revisions

Revisions	Date	Author	Note
Rev. 2.7	-	-	Changed the name to some variables to have the same indication as in VMU-C and programming software
Rev. 2.8	-	-	Modification of "1.3 Application notes. RS485 general considerations" (point 1). Introduction of electrical limits in "3.1 Maximum and minimum electrical values in EM100 / ET100 SERIES"
Rev. 2.9	-	-	Correction of Table 2.7.8 (serial number). Removal of EM112 hour counter reading indication (address 002Ch). Introduced a table to better explain the measurements mode and sign convention
Rev. 2.10	-	-	Correction of Table 2.7-8 (serial number). Correction of Modicon references in Table 2.7-5.
Rev. 2.11	-	-	Introduction of an additional register including the "Production year" reference (Table 2.7-9)
Rev. 2.12	-	-	Introduction of high resolution energy meters (1 Wh resolution). Protocol for new version AV5
Rev. 2.13	-	-	Correction of table 2.7.6 (stop bits settings)
Rev. 2.14	-	-	Added explanation note (toggle function) for "Measurement mode selection" (1103h)
Rev. 3.0	16/May/2023	-	Extended number of registers to be read with a single request up to 125 (word). Active tariff selection available also for EM112 model
Rev. 3.1	12/Jan/2024	-	Correction of Table 2.7-5: Home page selection – Max value = 10
Rev. 3.2	03/Apr/2025	-	Amended Table 2.7.2 – Measuring system (available for all versions) Amended Table 2.7.6 - Max number of words readable with a single Modbus request Correction of paragraphs 1.2.1 and 1.2.2 (Max number of words readable with a single Modbus request) Added Table 2.4-4, high resolution meters (resolution 0.1 Wh)
Rev. 3.3	20/May/2025	-	Amended Table 2.4-3 – removed kWh(-) Partial and kvarh(-) Partial
Rev. 4.0	20/Jun/2025	-	The structure of the document has been modified. Correction in table 3.3